


**Fitting the blinds**


Insert the rear blind into the recess at an angle and push the tightener against the wall.





Lift the control end of the blind until level and release pressure, the blind will hold itself in place.

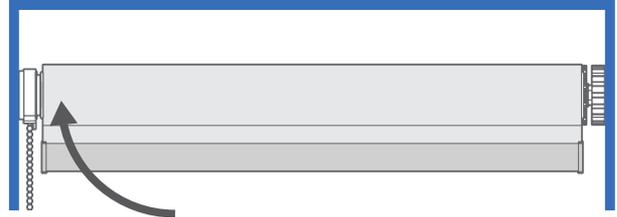

Make adjustments to the position of the blind so that it is straight and level, before locking it in place.

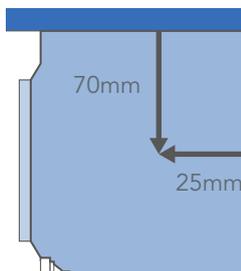

The rear blind should be positioned 70mm down from the top of the recess, and 25mm in from the front of the recess.

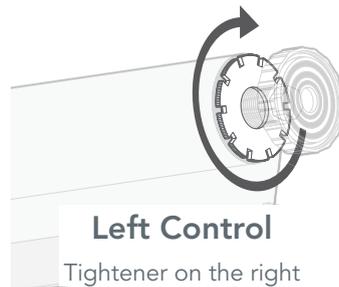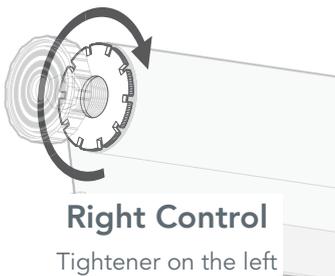

Hold the blind securely in place and turn the tightening wheel to tighten the blind in place.

Turn the wheel clockwise relative to the roller tube.

**Top Tip**



Make sure to tighten the wheel as much as possible to keep the blind secure and prevent slipping. However, avoid over-tightening, as it could lead to breakage.



Once the blind is secured in place, turn the end cap until it locks against the tightening wheel. This will lock the tightening wheel in place.


Turn the cap anti-clockwise relative to the roller tube.

Now repeat the whole process with the front blind. The front blind can be fitted right up at the top of the recess.

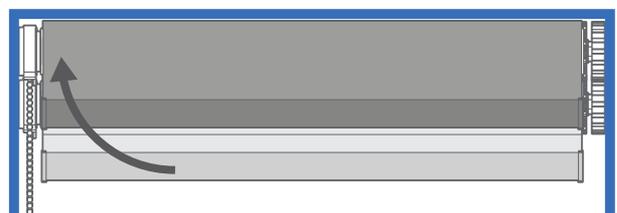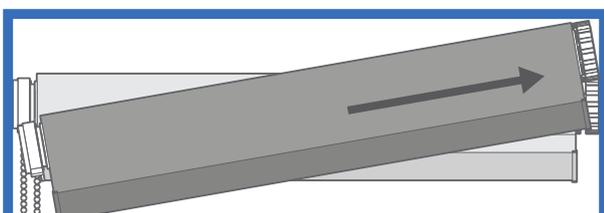

**Cord Tensioner**

**Child Safety**

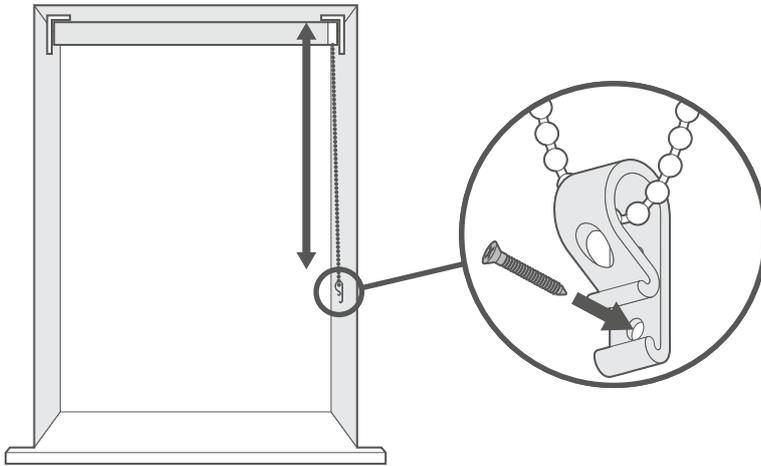

The cord retaining device must be installed at the maximum distance possible from the control mechanism to prevent looped cords from becoming slack.

Place the retaining device on the wall and mark the position of the screw hole(s) with a pencil.

Attach the retaining device to the wall using the fixings provided.